



Maintenance: After use | P - H Strut | 28461



Prerequisites before Maintenance:

- Only Holmatro trained and certified technicians are allowed to perform this task.
- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary equipment; WD40, Omnishore PA9 Handpump (H20 only)

1		<p>Inspect;</p> <p>Check if the housing of the strut has any;</p> <ul style="list-style-type: none"> • Major damages • Traces of leakage • Modifications
2		<p>Inspect;</p> <p>Check if the warning labels are still readable</p> <p>Check if the identification label is still readable</p>
3		<p>Check; (H struts only)</p> <p>The coupler for leakage</p> <p>If the dust cap on the hydraulic coupler is present and functioning okay. If not, apply WD40 and check again</p>

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

4		<p>Check; (P struts only)</p> <p>The air coupler for damages.</p> <p>If the can move out and locks in the different positions.</p>
5		<p>Check;</p> <p>Is the locking mechanism is functioning okay on both sides.</p>
6		<p>Inspect;</p> <p>Both couplers for damages.</p> <p>If the lock pin is still in good condition and present.</p>
7		<p>Inspect;</p> <p>Pull the strut out completely and check for;</p> <ul style="list-style-type: none"> • Damages, cracks. • If the nut moves up and down the full length.
8		<p>Inspect; (H strut only)</p> <p>Connect the strut to the Omnishore handpump, and pump it out completely. Check for;</p> <ul style="list-style-type: none"> • Damages, cracks, leakage. • If the nut moves up and down the full length. • Smooth retraction of the plunger.