






Maintenance: After use | HLJ 50 A 6/10 | 29638



Prerequisites before repair:

- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary special equipment;	
1	 <p>Check;</p> <p>The tool for damages/leakages that can influence the operation and safety of the tool.</p> <p>Check if the plunger is fully retracted and the swivel-head (1) can move in different directions.</p> <p>Check the presence and functioning of the dustcaps (2 & 3).</p>
2	 <p>Operate;</p> <p>Connect a HAP 10 pump to the coupler (1) and apply up to 8 bar of pressure to the jack.</p> <p>The safety should audibly be activated at 8 bar of pressure.</p> <p>Disconnect the HAP 10 pump.</p>
3	 <p>Operate;</p> <p>Connect the jack to a handpump, and fully extend the plunger (1). Check the plunger for damages, dents and scratches.</p> <p>Depressurize the jack and observe that the plunger fully retracts (2) in a smooth and even motion.</p>

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.