



Maintenance: After use | HAP 10 | 29639



Prerequisites before repair:

- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary special equipment;

1		<p>Check;</p> <p>The tool for damages that can influence the operation of the tool</p>
2		<p>Operate;</p> <p>Move the pump handle up and down and assess if the plunger moves up and down smoothly and evenly over the entire length of the stroke.</p>
3		<p>Check;</p> <p>If the air hose (1) is securely attached to the pump.</p> <p>If the gauge (2) is undamaged and readable.</p> <p>If the feet (3) function and can be folded.</p>

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

4



Check;

The hose for damages such as; tears, blisters and cracks.

The coupler for damages.