

Maintenance Instruction

TR 5000 series



Maintenance recommendations:

- **Wear full protective gear during maintenance**
 - Always act according to the safety instructions as supplied with each tool!
- Necessary equipment: WD-40, soft cloth.*

After use (every time)

Revision 01-17

Contact the Holmatro dealer if one of the items does not function properly!



Step 1

- Check the general condition of the tool
- Check for oil leakage
- Check the readability of the identification / safety label, replace if unreadable
- Store the tool with the plunger slightly outwards 5 to 10 mm



Step 2

- The proper functioning of the deadman's handle
- The control handle moves smoothly
- The control handle returns to the neutral position
- The dust cap is firmly attached
- Check the functioning of coupler
- Check the coupler for dirt and oil leakage
- Clean coupler with a soft cloth. If necessary with water and soap
- If necessary grease with WD-40

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

Maintenance instruction

TR 5000 series

After use (every time)

Revision 01-17




Step 3

- Check the crossheads for wear and tear
 - if applicable check the functioning of the laser pointer
- Check the function of the 4x LED's on the front end of the tool

Step 4

Check the functioning of the 2x LED's on the back.

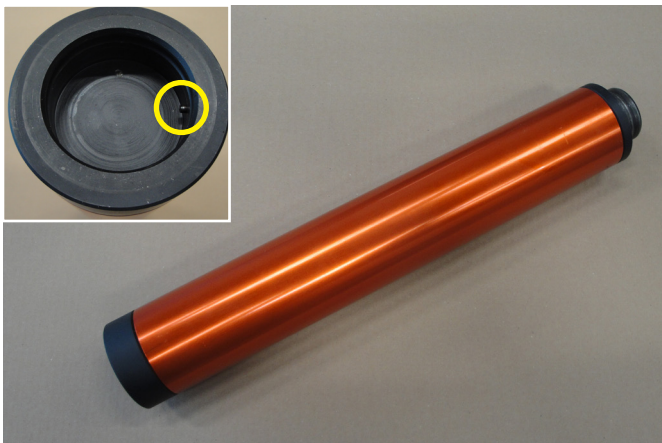

Step 5

- Check the general condition of the extension pipes
- Check the presence of the lock pin
- Check whether the extension pipes can be mounted properly (Only on TR 5340)

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.