



SLOPED FLOOR SHORE

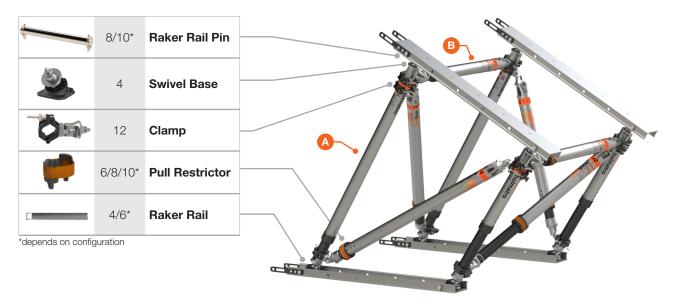

Tabulated data is based on available items within the Advanced Vehicle & Structural Shoring Set + additional Strut Bracing Set

Notes

- The shoring construction/installation must always be approved by a trained Structural Specialist.
- Total Working Load of the Sloped Floor Shore is the sum of the Working Load of all load supporting struts (A).
- Place a Pull Restrictor on all bracing struts (B).

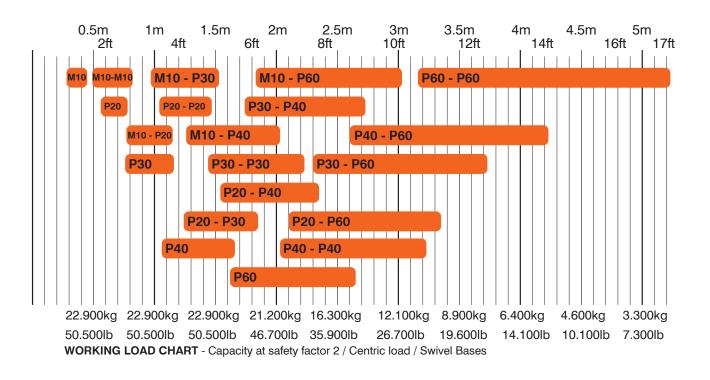

© Holmatro 2023-05-01

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. Holmatro B.V. and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. Values can vary within the manufacturer measurements. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro (T +31 (0)162-751480). Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

