

Maintenance: After use | PDR200 | 28535



Prerequisites before repair:

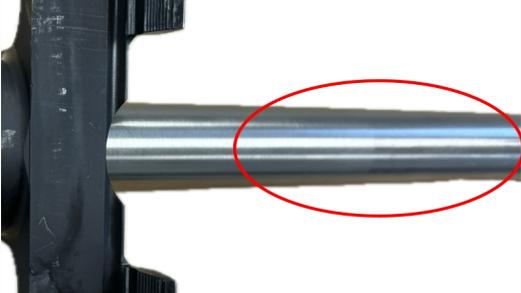
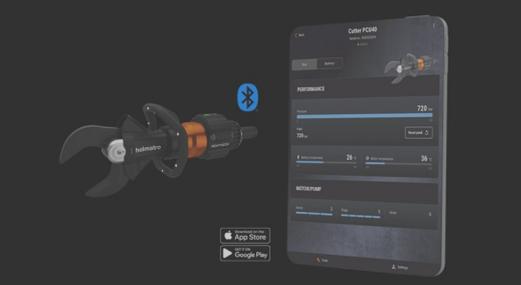
- Only Holmatro trained and certified technicians are allowed to perform this task.
- Wear full protective gear during maintenance.
- Always act according to the instructions supplied with each tool.

Necessary equipment; Battery, Mobile device with MyHolmatro app.

1		<p>Check:</p> <p>General condition, damages and oil leakage. Contamination, clean if necessary.</p> <p>Do not test tools with questionable safety.</p>
2		<p>Check:</p> <p>Battery plate for damage, corrosion.</p> <p>If the battery slips into position, and locking mechanism works.</p> <p>Readability of the identification label.</p>
3		<p>Check:</p> <p>Check if the LED's switch on when the tool is switched on.</p> <ul style="list-style-type: none"> • The motor must not run. • The plunger may not move.

Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | www.holmatro.com

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.

<p>4</p>		<p>Check:</p> <p>Activate the tool and turn the control handle to operate the tool in all speed modes and directions. Check if the movement corresponds with the arrows. Check if the tool stops immediately when the handle is released.</p> <p>Reject if the control handle doesn't move smoothly</p>
<p>5</p>		<p>Check:</p> <p>The protective cover on the handle. The condition of the OTC connector.</p>
<p>6</p>		<p>Check:</p> <p>Functioning of the LED lighting. Damages that could influence the performance.</p>
<p>7</p>		<p>Check:</p> <p>Toe and saddle for damages.</p> <ul style="list-style-type: none"> • Burrs (resurfacing allowed), cracks. • Missing pieces. <p>Reject when >10% of the surface is missing.</p>
<p>8</p>		<p>Check:</p> <p>Extend the plunger and check for;</p> <ul style="list-style-type: none"> • Scratches, rust. • Deformation.
<p>9</p>		<p>Check:</p> <p>Download the MyHolmatro App on a mobile device, and run the self-test.</p>